




# LCD - Battery operated Safety Digital Scoreboard Instructions

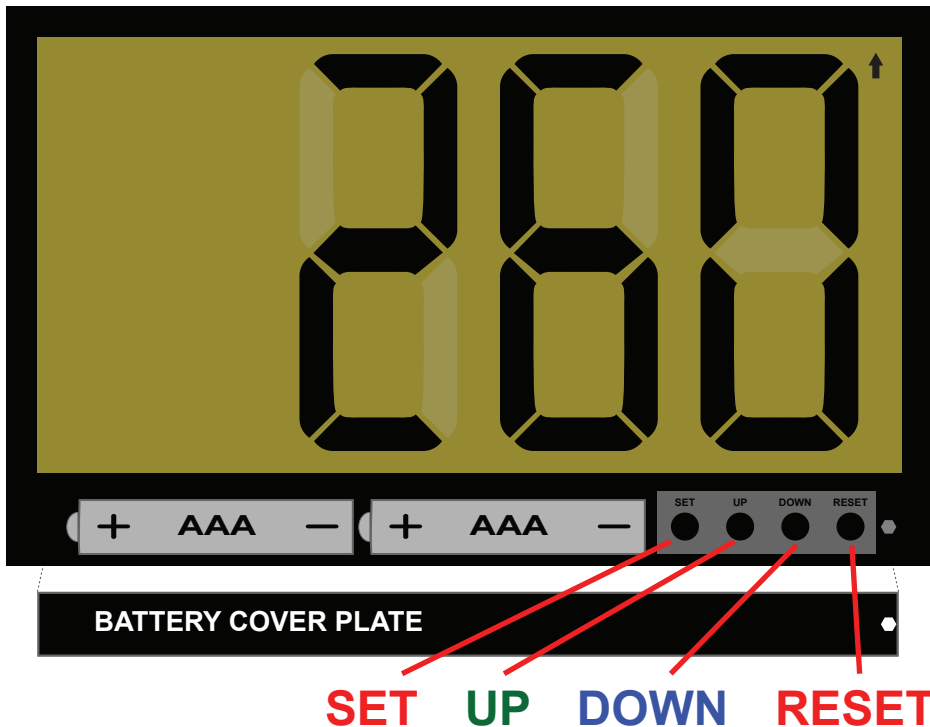

## SETTING THE LCD DISPLAY

Use the small screwdriver to temporarily remove the screw from the battery compartment face plate and insert 2-AAA long life batteries into the compartment. The LCD Display will show "8888" and "↑" or "↓". After 2 (TWO) seconds the LCD will display "0".

**STEP 1.** Press and hold the **"SET"** button for 2 (TWO) seconds. The "0" will flash.

**STEP 2.** Press the **"UP"** button to set and increase the number (1,2,3,...) - the number will increase quickly when you hold down the **"UP"** button.

Press the **"DOWN"** button to decrease the number (9999, 9998, 9997, 9996...) - the number will decrease quickly when you hold down the **"DOWN"** button.

**STEP 3.** When the desired number is reached, press the **"SET"** button - the number will stop flashing.

**STEP 4.** Press either **"UP"** or **"DOWN"** a final time and the timer will start to count up or down one day (24 hour period) at a time. When the timer is counting up, "↑" will display constantly. When the timer is counting down, "↓" will display constantly. When the timer is not counting and set on a constant number, there will be no arrow in the LCD display.

**NOTE:** If you think you have made an error during the set-up process, press RESET - the LCD will display "0" and start over.