




LED Red/Green Digital Timer Instructions 2.3

1. Remove protective film from each digital display.
2. **The timer has been matched to the remote at the factory.** The assigned number is written on the yellow round sticker on the back of the timer. Press the timer # and the digits on the selected timer will flicker briefly. (example: press 1 on the remote for the top timer and press 2 on the remote to set the bottom timer)
3. **Color/brightness:**
 - * Press R/G to choose color
 - * Press ☀️ to change brightness
 - * Press SET to save color/brightness choice
4. **Set your number:**
 - * First digit should be blinking. **DO NOT PRESS NUMBER KEYS!!!**
 - * Use up/down arrows to select digit you want to set it to
 - * Press SET to save digit setting
5. **Count UP/DOWN, CONSTANT:**
 - * Both arrows should be blinking on left.
 - * Press UP arrow if you want it to count up
 - * Press DOWN arrow if you want it to count down
 - * Press CNST on remote if you do not want it to count
 - * *Optional: For decimal point press D on remote until decimal is in correct place*
 - * The arrow you have selected will stop blinking and the other arrow will disappear.
 - * Press SET to save count up/down or constant number setting
6. The far right digit will begin blinking, indicating timer is now set.
7. Press the OK button to exit and lock current timer settings.
8. If you have more than one timer, repeat steps 1-8 above.
9. To reset or change digits on the timer, repeat steps 2-7 above.



Remote Control Buttons (Fig 1)

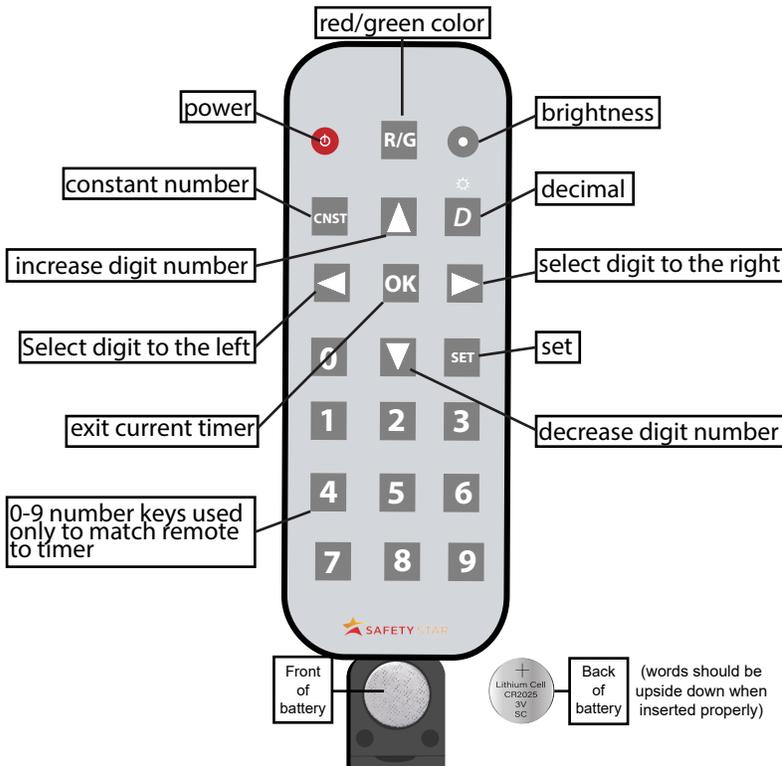

TROUBLESHOOTING

- **Remote not responding:**
 - * Press 1 on remote, digits should flicker briefly
 - * Press SET on back of timer to see what number it is set to. Use SUB or ADD to set it to the number on the sticker on the front. Press SET again. Now remote should respond. If not try next step.
 - * Open battery compartment and close it. Now remote should respond.
 - * Make sure battery is properly inserted (see diagram to the left)
- **Does not turn on at all:**
 - * Did you use provided AC adapter?
 - * Try a different outlet.
 - * Make sure all cords are plugged in snug on the back.
- **Does not count:**
 - * Repeat above instructions 2-8. Make sure there is an arrow displayed (if no arrow it will not count). Arrow disappears after 72 hours, but timer will still count.
- **Numbers do not display correctly:**
 - * Email a picture to graphics@safetystar.com
- If all else fails, unplug AC adapter from outlet and wait 1 minute to plug back in, try steps 2-8 again.
- Any other problems contact us at 1-800-850-3282.

800-850-3282 or visit us online at: www.safetystar.com